






EQUERRE POUR SAUTERELLE A POUSSER-TIRER

2132NG
2134NG
2136NG

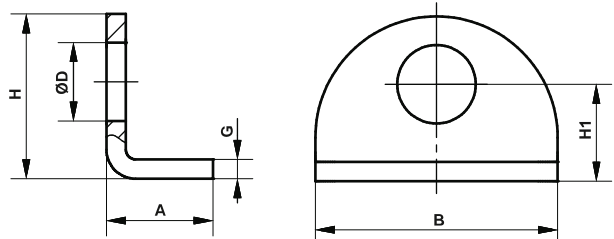



N°	[kg]	A	A1	A2	A3	B	B1	ØD	G	H	H1	N
2132NG	0,06	22	7,0	36	32	50	7	16,2	4	34	20	6,5
2134NG	0,10	26	8,5	42	30	59	9	20,2	5	43	26	8,2
2136NG	0,18	34	10,5	48	30	69	12	24,2	6	51	30	11

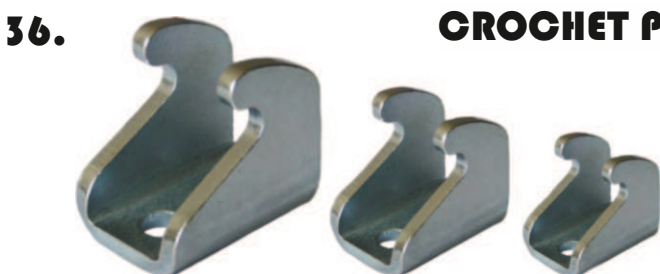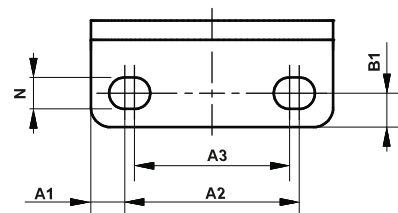


CROCHET POUR SAUTERELLE A ETRIER A PLAT

1421Z
1423Z
1425Z

Crochet pour :
1421Z - 1421; 1421B
1423Z - 1423, 1423B
1425Z - 1425, 1425B

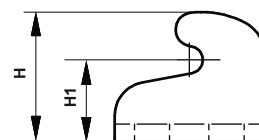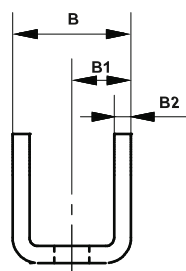



N°	[kg]	A	A1	A2	B	B1	B2	ØD	H	H1
1421Z	0,015	22	5,5	11	17,5	8,75	2,5	5,2	19	12
1423Z	0,032	29	7,5	14	21,0	10,50	3,0	6,5	28	19
1425Z	0,086	43	12,0	19	28,0	14,00	4,0	8,5	37	25

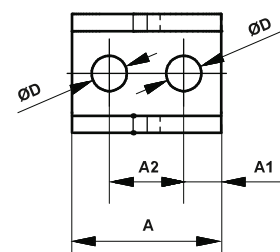

CROCHET POUR SAUTERELLE A ETRIER A 90°

1431Z
1433Z
1435Z

Crochet pour :
1431Z - 1431; 1431B
1433Z - 1433, 1433B
1435Z - 1435, 1435B

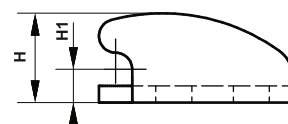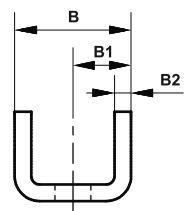

N°	[kg]	A	A1	A2	B	B1	B2	ØD	H	H1
1431Z	0,014	26	5,5	11	17,5	8,75	2,5	5,2	12,7	4,5
1433Z	0,028	35	7,5	14	21,0	10,50	3,0	6,5	16,1	6,0
1435Z	0,075	51	12,0	19	28,0	14,00	4,0	8,5	21,5	8,0

